

## Repair instruction

**Description:** Oven door

**Part Number:**

Look for Service Centres, Point of Sale addresses and other information on: [www.thetford.eu](http://www.thetford.eu)

**Version:**

**Date:** May 2009

**Tools required:**


A

Start by opening the drop down door you are wanting to change



B

There are 2 hinges holding the door in place and each have a rocker hook on the lower part of the hinge

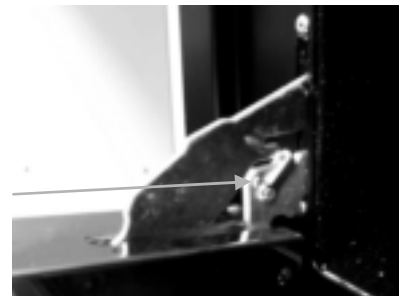

C

Move the rocker hook so that it engages with the top part of the hinge as shown.




D

On some models there will be a screw at the side of the hinge through the main body of the oven, loosen this screw taking care not to remove it and slide along the cut out as far as it will go.




E

Lift the door back up as if you were closing it. While closing the door pull towards you.

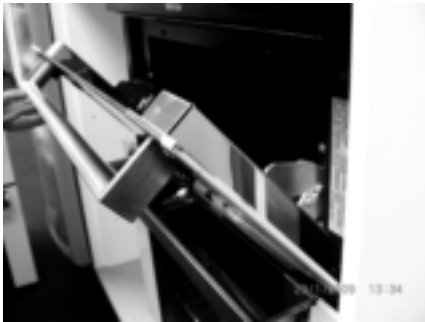


F

The door and hinges will now start to slide freely away from the oven, the door can now be replaced.

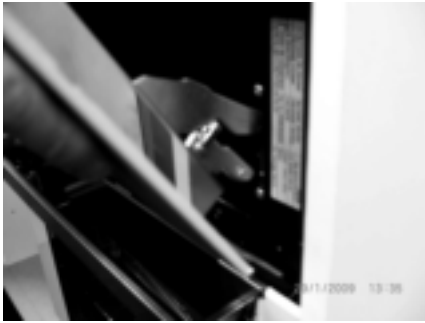

G

Once the replacement door has been slid back into place make sure the rocker hook is disengaged from the upper part of the hinge

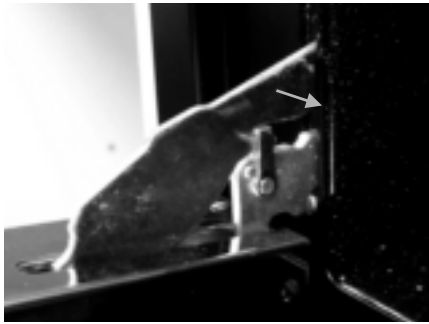

H

For those with the additional screw, slide it back to the upright most position and tighten.



I

The door has now been replaced

